

Blink codes for Tennant E-411
 10-18-01 by CAC

This table associates engine speeds, input select options, engine status, and blink codes.
 The first column was the column in question as the present sticker is incorrect.

Tennant Speed	Typical engine Speed (RPM)	Internal Gov. Speed #	Blinks	Engine running?	h Green Input 1	g high Input 2
fast	2400	1	1	yes	low	low
medium	2000	2	2	yes	high	low
slow	1350	3	3	yes	low	high
not used	1000	4	4	yes	high	high
fast	2400	1	5	no	low	low
medium	2000	2	6	no	high	low
slow	1350	3	7	no	low	high
not used	1000	4	8	no	high	high